


Confidentiality Notice: This document (including all information contained therein), is owned by QSI Industries, Inc. (QSI) and must be kept in confidence and used solely for the owner's specified purposes. This document must not be copied or reproduced, nor divulged, in whole or part, without the owners prior written permission.
 © 2007, QSI Industries, Inc. All rights reserved.

G Scale Sound System with plug board.

Note: Wire motors so the engine runs forward when MOT+ is positive.

Note: Wire Pickups so engine runs forward when TRK+ is positive.

Note: Bottom board may be cut at white line.

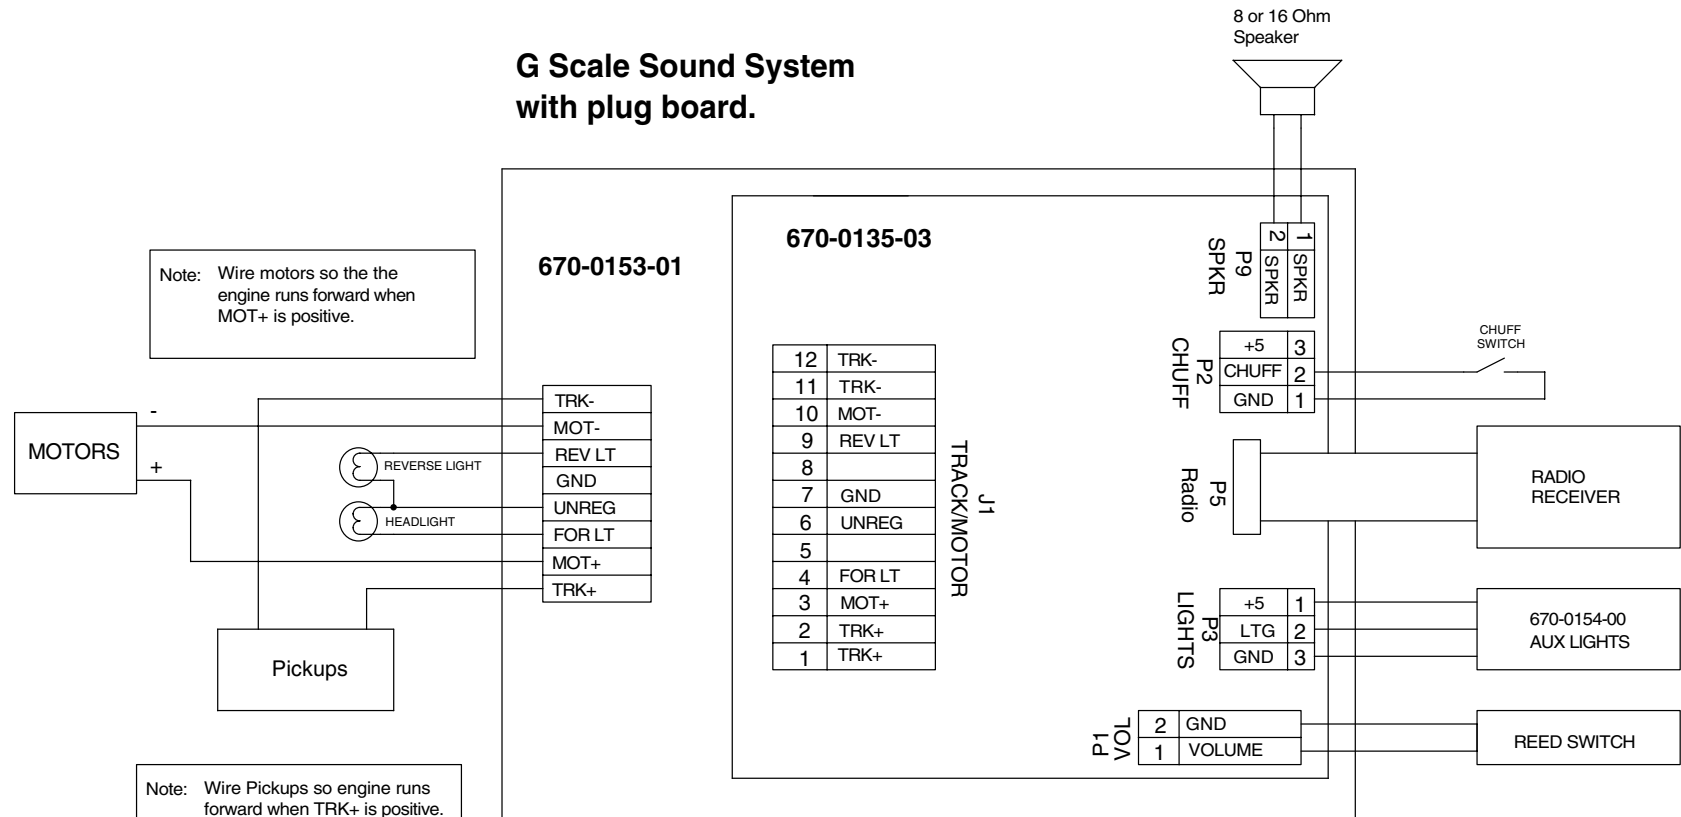

Q S Industries, Inc.
 3800 SW Cedar Hills Blvd. Suite 224
 Beaverton, OR 97005 USA
 Ph: 503-350-0595 Fx: 503-626-9995

Title **G Scale Sound System**

Size B	Document Number	Rev 1
--------	-----------------	-------

Date: Wednesday, June 20, 2007 Sheet 1 of 2

Confidentiality Notice: This document (including all information contained therein), is owned by QSIindustries, Inc. (QSI) and must be kept in confidence and used solely for the owner's specified purposes. This document must not be copied or reproduced, nor divulged, in whole or part, without the owners prior written permission.
 © 2007, QSIindustries, Inc. All rights reserved.

670-0135-03 PLUG CONNECTIONS

Notes:

General

Maximum peak operating voltage: 36V

Maximum continuous load current: 3A

Lighting

Outputs are 30V 500ma open collector outputs designed to operate LEDS or Lamps from the common unregulated supply, or and external +5V Supply

Only the Headlight and Reverse Light are supported.

Additional lighting may be controlled by an optional auxillary lighting board.

J1 - TRACK / MOTOR

- 1: TRK+
- 2: TRK+
Track +, Connect to positive side of track when the engine is going in the forward direction.
- 3: MOT+
Motor +, Connect to motor to cause the engine to go foward when positive.
- 4: REV LT.
Reverse (Back) or Tender Backup Light.
- 7: GND
Common Ground.
- 9: FWD LT.
Forward Light (Headlight)
- 10: MOT-
Motor -, Connect to motor to cause the engine to go foward when negative.
- 11: TRK-
- 12: TRK-
Track -, Connect to negative side of track when the engine is going in the forward direction.

Mating Connector:
Samtec
SSW-110-01-T-S

J2 - LIGHTING

No connections are made.

Mating Connector:
Samtec
SSW-112-01-T-S

 
P1 - Volume Switch

Cable P# 109-0115-00

- 1: Volume
- 2: GND

Volume is controlled by a magnetic switch or push button. It may be connected to J2 or P1

Mating Connector: JST ZHR-2




P2 - Chuff Cam

Cable P# 109-0121-00

- 1: GND
- 2: Cam
- 3: +5

The engine will chuff when the switch closes.

Mating Connector: JST ZHR-3

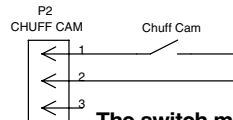

The switch must be electrically isolated.

P3 - Aux Lighting

Cable P# 109-0125-00

Expansion connector for auxillary lighting board.

- 1: +5
- 2: DATA
- 3: GND

Refer to aux lighting board for proper connections,

Mating Connector: JST PHR-3

P5 - Radio

Cable P# 109-0126-XX
(XX denotes length in inches)

Expansion connector for Radio Receiver.

P9 - Speaker

Cable P# 109-0127-00

External 8 or 16 ohm speaker.

Minimum impedance 8 Ohms

Q S Industries, Inc.

3800 SW Cedar Hills Blvd. Suite 224
Beaverton, OR 97005 USA
Ph: 503-350-0595 Fx: 503-626-9995

Title		
G Scale Sound System		
Size	Document Number	Rev
B		1
Date: Wednesday, June 20, 2007		
Sheet		2 of 2
1		